

# RGB-X

## ECO SMOOTH SWING

### BASIC INSTRUCTIONS:

Press and hold the LED button to bring out of sleep mode. You will hear a 'Power On' voice, and the LED button will turn on. The saber is now in Wake mode. Watch this LED when controlling the saber, as listed in the table below. Press the button once quickly, to turn the saber blade on.

### WHEN SABER IS ON:

CONTROL	EFFECT	OPTIONS/ DESCRIPTION
Press button once quickly	Blaster Deflect	-----
Hold for 1 LED Flash (0.5 seconds)	Lock-up	Press button once to end lock-up
Hold for 2 LED Flashes (1 second)	Infinite Color Change	Cycles all possible colors; press button once to select
Hold for 3 LED Flashes (1.5 seconds)	Quick Color Change	Cycles major colors only; press button once to select
Hold for 4 LED Flashes (2 Seconds)	Shuts off blade	Saber is still in Wake mode.

# RGB-X

## ECO SMOOTH SWING

### BASIC INSTRUCTIONS PAGE 2:

#### WHEN SABER IS OFF:

CONTROL	EFFECT	OPTIONS/ DESCRIPTION
Press button once quickly	Ignite Saber	Follow instructions from page 1
Hold for 1 LED Flash (0.5 seconds)	Volume Adjust	Volume high, Volume low and Mute.
Hold for 2 LED Flashes (1 second)	Light Effects	Stable, Unstable, and Pulse
Hold for 3 LED Flashes (1.5 seconds)	Motion Control Toggle	Motion controls on or off. Does not affect font change on twist
Hold for 4 LED Flashes (2 Seconds)	Flash On Clash Toggle	Turns on and off flash on impact.
Hold for 5 LED Flashes (2.5 Seconds)	Font Change	Selects the next sound font on the board.
Quick Twist	Font Change	Selects the next sound font on the board
Hold for 10 Seconds	Sleep Mode	Also occurs after idle for 10 minutes